


USER MANUAL



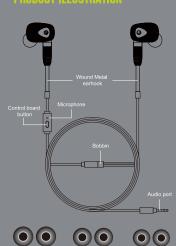

Click control board button once to pause and click again to play









lun)

Click



When on calling or there is phone call coming, long press control board for 2










Inset the earbud into the earhat's round hole,till it matched well

- and phone, please land Mifo website and check on
- What I can do if the headset is easy to fall of and not wear stable?

- When use the third media player app to play, Phone's software and the third party's software for different definition of the keys, there maybe key function discrepancy, suggest use the systems itself media player.





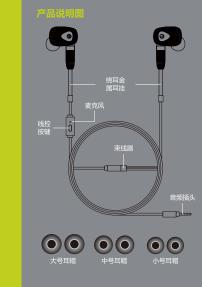

*因手机系统版本、安装软件等差异,手机对线控功能的 识别可能存在不同,并非线控问题。 * Android手机按键定义与手机系统有关,请详阅手机说

① 播放/暂停



单击线控按键一下

② 下一曲/上一曲



切换下一曲功能

切换上一曲功能

③ 音乐快进/音乐快退(部分系统和软件不支持)



Gun

宝击后 按住

④ 接听/挂断



□

⑤ Siri语音助手

(m)

⑥ 拒接来电









耳机按键在手机上使用出现不兼容

● 耳机佩戴易掉,不稳

机配耳塞可能不适合您的耳道尺寸,包装附件内附有不同

• 耳机有杂音/异音

